

5. MAIN Electrical Parts List

Parts Code	Design Loc	Description
0404-001250	D4000,D7003	DIODE-SCHOTTKY
0406-001506	ZD1001,ZD10012	DIODE-TVS
0406-001506	ZD10014,ZD10015	DIODE-TVS
0406-001506	ZD1002,ZD2001,ZD8004	DIODE-TVS
0406-001506	ZD8005	DIODE-TVS
0406-001553	ZD4013,ZD7003	DIODE-TVS
0406-001561	ZD10002,ZD10008	DIODE-TVS
0406-001561	ZD10009,ZD10010	DIODE-TVS
0406-001561	ZD10011,ZD10018	DIODE-TVS
0406-001592	ZD10000,ZD10001	DIODE-TVS
0406-001592	ZD10003,ZD10004	DIODE-TVS
0406-001592	ZD10005,ZD10006	DIODE-TVS
0406-001592	ZD10007,ZD10016	DIODE-TVS
0406-001592	ZD10017,ZD10019	DIODE-TVS
0406-001592	ZD10020,ZD10021	DIODE-TVS
0406-001592	ZD10022,ZD10023	DIODE-TVS
0406-001592	ZD4016,ZD4017,ZD4018	DIODE-TVS
0406-001592	ZD4021	DIODE-TVS
0406-001596	D8000,D8001	DIODE-TVS
0406-001709	ZD7004,ZD7005,ZD7006	DIODE-TVS
0406-001709	ZD8009,ZD8010,ZD8011	DIODE-TVS
0406-001715	ZD4000	DIODE-TVS
0406-001728	D7002	DIODE-TVS
0406-001740	ZD7001,ZD7002	DIODE-TVS
0406-001743	ZD4001,ZD4002,ZD4003	DIODE-TVS
0406-001743	ZD4004,ZD4005,ZD4006	DIODE-TVS
0406-001743	ZD4015,ZD4019,ZD4020	DIODE-TVS
0406-001743	ZD7000	DIODE-TVS
0406-001763	ZD2000,ZD4011,ZD4012	DIODE-TVS
0406-001763	ZD4014,ZD7007,ZD7008	DIODE-TVS
0406-001763	ZD7009,ZD9000,ZD9001	DIODE-TVS
0406-001780	ZD8008,ZD8014	DIODE-TVS
0406-001781	ZD8002,ZD8003,ZD8012	DIODE-TVS
0406-001781	ZD8013	DIODE-TVS
0505-001883	TR4001	FET-SILICON
0505-003403	TR7000	FET-SILICON
0505-003529	TR4000	FET-SILICON
0505-003564	TR9000	FET-SILICON

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

0601-003629	LED9000	LED
0801-003435	U10002	IC
1001-001755	U10000,U4003	IC
1001-001972	U1507	IC
1001-001975	U1500,U1503,U1505	IC
1001-001991	U2000	IC
1001-002036	U7004	IC
1001-002042	U1501	IC
1001-002050	U4501	IC
1003-002911	U4010	IC
1009-001066	U4018	IC
1201-003952	U1508	IC
1201-004026	U2011	IC
1201-004027	U8002	IC
1201-004036	U4551	IC
1201-004112	U1007	IC
1201-004113	U1013	IC
1201-004114	U1014	IC
1201-004118	U1000	IC
1201-004137	U1504,U1506,U2500	IC
1201-004137	U2502	IC
1201-004140	U1502	IC
1202-001120	U9003	IC
1203-008190	U4013	IC
1203-008250	U8001	IC
1203-008326	U4502	IC
1203-008395	U10001	IC
1203-008472	U9000	IC
1203-008507	U9004	IC
1203-008719	U10003	IC
1203-008720	U9002	IC
1203-008797	U4000	IC
1203-008802	U7007	IC
1203-008804	U7000	IC
1203-008811	U4002	IC
1203-008827	U7500	IC
1203-008850	U8004	IC
1203-008882	U7013	IC
1203-008898	U1010	IC

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

1203-008924	U10010,U10012	IC
1203-008925	U10013	IC
1203-008930	U7002	IC
1203-008931	U7005	IC
1204-003686	U9001	IC
1205-005106	U4014	IC
1205-005619	U11000	IC
1205-005737	U2009	IC
1205-005738	U5003	IC
1205-005745	U8000	IC
1205-005746	UCP500	IC
1205-005791	U4500	IC
1209-002401	U4012	IC
1209-002428	U4006	IC
1209-002442	U4011	IC
1209-002450	U4007	IC
1301-002183	U5000	IC
1105-002877	UCP500UP	IC
1107-002536	UME6000	IC
1204-003748	U4550	IC
1404-001724	TH1000,TH3000,TH5000	THERMISTOR
1404-001724	TH7000,TH9500,V7000	THERMISTOR
1405-001183	V8000,V8001	VARISTOR
1405-001395	V10001,V2001,V2002	VARISTOR
1405-001395	V2020,V2021,V2022	VARISTOR
1405-001395	V2024,V2025,V3000	VARISTOR
1405-001395	V3004,V7001,V7003	VARISTOR
1405-001395	V7004,V7011	VARISTOR
1405-001404	V10000,V4005,V7002	VARISTOR
1405-001404	V7005,V7008	VARISTOR
1405-001409	L2021	VARISTOR
1405-001410	V4004	VARISTOR
1405-001411	V2023	VARISTOR
1405-001415	V3001	VARISTOR
1405-001421	V4002	VARISTOR
1405-001425	V4000	VARISTOR
1405-001439	V2000	VARISTOR
2007-007142	R4029,R4030,R4099	R-CHIP
2007-007318	R6010,R7016	R-CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2007-007517	R4021,R4022	R-CHIP
2007-007741	R3003,R3004,R3019	R-CHIP
2007-007741	R3020,R4016,R5001	R-CHIP
2007-007741	R5003,R5039,R7009	R-CHIP
2007-007741	R7011,R7020,R7021	R-CHIP
2007-007741	R7022,R8029,R8030	R-CHIP
2007-007942	R7007	R-CHIP
2007-007946	R7017	R-CHIP
2007-008053	R4506,R4507	R-CHIP
2007-008057	R2001,R2002	R-CHIP
2007-008210	R1000	R-CHIP
2007-008211	R10003,R9038	R-CHIP
2007-008263	R5042,R5043	R-CHIP
2007-008403	R7008	R-CHIP
2007-008420	R10002	R-CHIP
2007-008531	R10000,R10011,R10013	R-CHIP
2007-008531	R4025,R4033,R4039	R-CHIP
2007-008531	R4043,R4044,R7055	R-CHIP
2007-008531	R9022,R9023,R9025	R-CHIP
2007-008531	R9026,R9027,R9028	R-CHIP
2007-008531	R9029,R9030,R9031	R-CHIP
2007-008587	R8037	R-CHIP
2007-008774	R4014,R4018,R4042	R-CHIP
2007-008798	R4011	R-CHIP
2007-009111	R4028	R-CHIP
2007-009154	R5033	R-CHIP
2007-009155	R4038	R-CHIP
2007-009157	R11002,R4015,R4017	R-CHIP
2007-009157	R4019,R4024,R4031	R-CHIP
2007-009157	R4505,R7006,R8009	R-CHIP
2007-009157	R8012,R9010	R-CHIP
2007-009199	R2003	R-CHIP
2007-009201	R8010,R8011,R8031	R-CHIP
2007-009212	R4027,R4550,R5056	R-CHIP
2007-009212	R7001,R7029,R8000	R-CHIP
2007-009223	R8034	R-CHIP
2007-009314	R4040	R-CHIP
2007-009352	R5059,R9002	R-CHIP
2007-009408	R1503,R2505,R2506	R-CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2007-009408	R2507,R4009,R4023	R-CHIP
2007-009408	R5008,R5009,R5024	R-CHIP
2007-009408	R5025,R5068,R5069	R-CHIP
2007-009410	R1024,R1025	R-CHIP
2007-009793	R8035	R-CHIP
2007-009801	R7000,R7004,R7010	R-CHIP
2007-009805	R1502,R1504,R2000	R-CHIP
2007-009805	R3500,R3501	R-CHIP
2007-009838	R1500,R1501,R1506	R-CHIP
2007-009838	R2508	R-CHIP
2007-009866	R7003,R8005	R-CHIP
2007-009924	R8015,R8082	R-CHIP
2007-009969	R8001	R-CHIP
2007-010031	R7099	R-CHIP
2007-010202	R4020,R8036	R-CHIP
2007-010685	R1001,R1002	R-CHIP
2007-010690	R4503	R-CHIP
2007-010691	R4504	R-CHIP
2007-011378	R11004,R11005,R4013	R-CHIP
2007-011378	R8002,R9008	R-CHIP
2007-011542	R9000,R9001,R9009	R-CHIP
2007-011546	R5048,R5049,R5052	R-CHIP
2007-011546	R5053,R5054,R5055	R-CHIP
2007-011548	R11000,R11001,R5046	R-CHIP
2007-011548	R5051,R7026,R9006	R-CHIP
2007-011591	R5004,R5005,R5006	R-CHIP
2007-011591	R5007,R5010,R5013	R-CHIP
2007-011591	R5014,R5016,R5020	R-CHIP
2007-011591	R5021,R5026,R5027	R-CHIP
2007-011591	R5031,R5032,R5037	R-CHIP
2007-011591	R5060,R5061,R5074	R-CHIP
2007-011591	R5077,R5078,R5079	R-CHIP
2007-011591	R5093,R5094,R5095	R-CHIP
2007-011591	R5096,R5097,R5098	R-CHIP
2007-011591	R5099	R-CHIP
2007-011615	R5040,R5041,R9004	R-CHIP
2007-011648	R1003	R-CHIP
2007-011991	R4501	R-CHIP
2007-012416	R4502	R-CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2007-012417	R4500	R-CHIP
2203-000233	C4522	C-CERAMIC,CHIP
2203-000489	C7099	C-CERAMIC,CHIP
2203-000627	C4516	C-CERAMIC,CHIP
2203-000725	C7060	C-CERAMIC,CHIP
2203-001153	C4511,C4515	C-CERAMIC,CHIP
2203-002285	C7082,C8061	C-CERAMIC,CHIP
2203-005682	C10006,C10023,C10025	C-CERAMIC,CHIP
2203-005682	C10026,C10027,C10028	C-CERAMIC,CHIP
2203-005682	C10029,C10037,C10038	C-CERAMIC,CHIP
2203-005682	C10097,C10098,C10099	C-CERAMIC,CHIP
2203-005682	C2052,C4050,C4053	C-CERAMIC,CHIP
2203-005682	C4059,C4060,C4061	C-CERAMIC,CHIP
2203-005682	C4062,C4068,C4069	C-CERAMIC,CHIP
2203-005682	C7073,C8047,C9013	C-CERAMIC,CHIP
2203-005682	C9014,C9015,C9016	C-CERAMIC,CHIP
2203-005682	C9035,C9067,C9071	C-CERAMIC,CHIP
2203-005682	C9073,C9074,C9075	C-CERAMIC,CHIP
2203-005682	C9076,C9077	C-CERAMIC,CHIP
2203-005725	C1029,C2505,C8041	C-CERAMIC,CHIP
2203-005726	C8020,C8029,C8079	C-CERAMIC,CHIP
2203-005726	C9082	C-CERAMIC,CHIP
2203-005727	C11005,C11013,C4518	C-CERAMIC,CHIP
2203-005727	C4519,C4521	C-CERAMIC,CHIP
2203-005729	C8012,C8081	C-CERAMIC,CHIP
2203-005731	C8072,C8073,C8075	C-CERAMIC,CHIP
2203-005731	C8076	C-CERAMIC,CHIP
2203-005732	C8013,C8023,C8048	C-CERAMIC,CHIP
2203-005732	C8070,C8071,C8082	C-CERAMIC,CHIP
2203-005734	C9072,C9085	C-CERAMIC,CHIP
2203-005736	C10014,C1007,C1044	C-CERAMIC,CHIP
2203-005736	C1045,C1057,C1059	C-CERAMIC,CHIP
2203-005736	C1060,C1065,C1069	C-CERAMIC,CHIP
2203-005736	C1080,C1082,C1086	C-CERAMIC,CHIP
2203-005736	C1092,C1095,C1506	C-CERAMIC,CHIP
2203-005736	C1509,C1517,C1530	C-CERAMIC,CHIP
2203-005736	C2000,C2001,C2078	C-CERAMIC,CHIP
2203-005736	C2081,C2082,C2083	C-CERAMIC,CHIP
2203-005736	C2502,C2504,C2509	C-CERAMIC,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-005736	C2518,C2519,C2522	C-CERAMIC,CHIP
2203-005736	C2552,C3008,C3011	C-CERAMIC,CHIP
2203-005736	C3021,C3023,C4042	C-CERAMIC,CHIP
2203-005736	C4043,C4063,C4562	C-CERAMIC,CHIP
2203-005736	C7056,C7077,C7094	C-CERAMIC,CHIP
2203-005736	C7100,C7114,C7119	C-CERAMIC,CHIP
2203-005736	L2001,L2044,L2514	C-CERAMIC,CHIP
2203-005736	L3031,R2509	C-CERAMIC,CHIP
2203-005777	C1504,C1534,C1540	C-CERAMIC,CHIP
2203-005777	C2516,L1042,L1526	C-CERAMIC,CHIP
2203-005779	C10000,C10007,C10016	C-CERAMIC,CHIP
2203-005789	C1500,C1508,C1518	C-CERAMIC,CHIP
2203-005789	C1538,C1545,L1013	C-CERAMIC,CHIP
2203-005789	L1019,L1050,L1513	C-CERAMIC,CHIP
2203-005789	L2025	C-CERAMIC,CHIP
2203-005792	C1539	C-CERAMIC,CHIP
2203-005806	C1010,C1078,C1079	C-CERAMIC,CHIP
2203-005806	C4555	C-CERAMIC,CHIP
2203-006121	C1038,C8016	C-CERAMIC,CHIP
2203-006123	C1524,C1531,C1532	C-CERAMIC,CHIP
2203-006123	C2503,L1518,L2504	C-CERAMIC,CHIP
2203-006194	C4040,C4058	C-CERAMIC,CHIP
2203-006305	C1067,C1523,C2551	C-CERAMIC,CHIP
2203-006399	C5014,C6060,C7029	C-CERAMIC,CHIP
2203-006399	C7109,C8002	C-CERAMIC,CHIP
2203-006400	C2038,C4503,C4510	C-CERAMIC,CHIP
2203-006400	C4517,C6013,C6014	C-CERAMIC,CHIP
2203-006400	C7041	C-CERAMIC,CHIP
2203-006410	C2058,L1043	C-CERAMIC,CHIP
2203-006423	C10030,C1011,C1023	C-CERAMIC,CHIP
2203-006423	C1507,C1514,C1515	C-CERAMIC,CHIP
2203-006423	C1528,C1535,C1537	C-CERAMIC,CHIP
2203-006423	C2004,C2005,C2006	C-CERAMIC,CHIP
2203-006423	C2009,C2010,C2011	C-CERAMIC,CHIP
2203-006423	C2012,C2014,C2015	C-CERAMIC,CHIP
2203-006423	C2016,C2017,C2019	C-CERAMIC,CHIP
2203-006423	C2020,C2021,C2023	C-CERAMIC,CHIP
2203-006423	C2024,C2025,C2026	C-CERAMIC,CHIP
2203-006423	C2027,C2028,C2029	C-CERAMIC,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-006423	C2032,C2033,C2034	C-CERAMIC,CHIP
2203-006423	C4032,C4041,C4044	C-CERAMIC,CHIP
2203-006423	C4045,C4049,C4072	C-CERAMIC,CHIP
2203-006423	C4566,C5003,C5004	C-CERAMIC,CHIP
2203-006423	C6004,C7023,C7061	C-CERAMIC,CHIP
2203-006423	C7101,C8007,C8040	C-CERAMIC,CHIP
2203-006556	C1544,C7121	C-CERAMIC,CHIP
2203-006604	C1055,C1533,C5002	C-CERAMIC,CHIP
2203-006611	L2510	C-CERAMIC,CHIP
2203-006642	C7122	C-CERAMIC,CHIP
2203-006648	C4064	C-CERAMIC,CHIP
2203-006668	C9042	C-CERAMIC,CHIP
2203-006674	C4047	C-CERAMIC,CHIP
2203-006707	C1521,C4554	C-CERAMIC,CHIP
2203-006846	C4028	C-CERAMIC,CHIP
2203-006872	C7103	C-CERAMIC,CHIP
2203-006968	C2501	C-CERAMIC,CHIP
2203-006979	C2057,C4048	C-CERAMIC,CHIP
2203-007143	C4038	C-CERAMIC,CHIP
2203-007194	C2059	C-CERAMIC,CHIP
2203-007210	C6030,C6035,C6051	C-CERAMIC,CHIP
2203-007210	C6082,C6088,C6093	C-CERAMIC,CHIP
2203-007210	C6098	C-CERAMIC,CHIP
2203-007271	C4098,C4099,C7034	C-CERAMIC,CHIP
2203-007271	C7107	C-CERAMIC,CHIP
2203-007317	C2008,C2013,C2018	C-CERAMIC,CHIP
2203-007317	C4039,C4051,C4065	C-CERAMIC,CHIP
2203-007317	C4067,C4073,C8037	C-CERAMIC,CHIP
2203-007385	C8039	C-CERAMIC,CHIP
2203-007391	C1543,C2037,C2041	C-CERAMIC,CHIP
2203-007391	C2042,C2049,C4052	C-CERAMIC,CHIP
2203-007391	C8005,C8018,C8030	C-CERAMIC,CHIP
2203-007391	C8049,C8062,C9036	C-CERAMIC,CHIP
2203-007392	C1063	C-CERAMIC,CHIP
2203-007393	C1040,C3017,C4013	C-CERAMIC,CHIP
2203-007393	C4014,C7032	C-CERAMIC,CHIP
2203-007425	C7005	C-CERAMIC,CHIP
2203-007449	C1021,C1050,C1526	C-CERAMIC,CHIP
2203-007449	C1536,C2510,C2517	C-CERAMIC,CHIP

5. MAIN Electrical Parts List

2203-007449	C4502,C4504,C4505	C-CERAMIC,CHIP
2203-007449	C4507,C4565	C-CERAMIC,CHIP
2203-007456	C4016,C7030	C-CERAMIC,CHIP
2203-007486	C4017	C-CERAMIC,CHIP
2203-007544	C7090,C7091,C7092	C-CERAMIC,CHIP
2203-007544	C7096,C7097,C7098	C-CERAMIC,CHIP
2203-007621	C2079,C3024,C3025	C-CERAMIC,CHIP
2203-007621	C5000,C5001,C5010	C-CERAMIC,CHIP
2203-007621	C5011,C6080,C6081	C-CERAMIC,CHIP
2203-007621	C6089,C7037,C7088	C-CERAMIC,CHIP
2203-007621	C8004,C8014,C8015	C-CERAMIC,CHIP
2203-007621	C8019,C8021,C8022	C-CERAMIC,CHIP
2203-007621	C8024,C8027,C8028	C-CERAMIC,CHIP
2203-007621	C8031,C8032,C8033	C-CERAMIC,CHIP
2203-007621	C8034,C8035,C8063	C-CERAMIC,CHIP
2203-007621	C8064,C8080,C9046	C-CERAMIC,CHIP
2203-007781	C9062	C-CERAMIC,CHIP
2203-007796	C10017,C1039,C11002	C-CERAMIC,CHIP
2203-007796	C11003,C11007,C11008	C-CERAMIC,CHIP
2203-007796	C3016,C4035,C4508	C-CERAMIC,CHIP
2203-007796	C4550,C4551,C4552	C-CERAMIC,CHIP
2203-007796	C4553,C6000,C6001	C-CERAMIC,CHIP
2203-007796	C6003,C6008,C6009	C-CERAMIC,CHIP
2203-007796	C6010,C6011,C6012	C-CERAMIC,CHIP
2203-007796	C6025,C6026,C6027	C-CERAMIC,CHIP
2203-007796	C6028,C6029,C6037	C-CERAMIC,CHIP
2203-007796	C6039,C6042,C6043	C-CERAMIC,CHIP
2203-007796	C6045,C6046,C6048	C-CERAMIC,CHIP
2203-007796	C6049,C6053,C6054	C-CERAMIC,CHIP
2203-007796	C6057,C6058,C6061	C-CERAMIC,CHIP
2203-007796	C6062,C6063,C6065	C-CERAMIC,CHIP
2203-007796	C6066,C6067,C6068	C-CERAMIC,CHIP
2203-007796	C6075,C6076,C6077	C-CERAMIC,CHIP
2203-007796	C6083,C6092,C6099	C-CERAMIC,CHIP
2203-007796	C6100,C7026,C7031	C-CERAMIC,CHIP
2203-007796	C7036,C7040,C7050	C-CERAMIC,CHIP
2203-007796	C7052,C8003,C8017	C-CERAMIC,CHIP
2203-007796	C8025,C8036,C8044	C-CERAMIC,CHIP
2203-007796	C8055,C9018,C9031	C-CERAMIC,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-007796	C9045,C9055	C-CERAMIC,CHIP
2203-008097	C4561,C7025,C7078	C-CERAMIC,CHIP
2203-008097	C7087,C8000,C8006	C-CERAMIC,CHIP
2203-008097	C8008	C-CERAMIC,CHIP
2203-008158	C7102,C7108,C7111	C-CERAMIC,CHIP
2203-008158	C7112	C-CERAMIC,CHIP
2203-008242	C10002,C10004,C10008	C-CERAMIC,CHIP
2203-008242	C10009,C10012,C10033	C-CERAMIC,CHIP
2203-008242	C6002,C6033,C6047	C-CERAMIC,CHIP
2203-008242	C6064,C6087,C7043	C-CERAMIC,CHIP
2203-008242	C7048,C7049,C7051	C-CERAMIC,CHIP
2203-008242	C7053,C7054,C7074	C-CERAMIC,CHIP
2203-008242	C7079,C7104,C7118	C-CERAMIC,CHIP
2203-008242	C7152,C9001,C9009	C-CERAMIC,CHIP
2203-008242	C9011,C9023,C9024	C-CERAMIC,CHIP
2203-008242	C9025,C9026,C9034	C-CERAMIC,CHIP
2203-008242	C9043,C9044,C9047	C-CERAMIC,CHIP
2203-008242	C9048,C9049,C9081	C-CERAMIC,CHIP
2203-008242	C9087,C9088,C9089	C-CERAMIC,CHIP
2203-008242	C9091,C9098	C-CERAMIC,CHIP
2203-008243	C4046,C4078	C-CERAMIC,CHIP
2203-008394	C1096	C-CERAMIC,CHIP
2203-008470	C7105	C-CERAMIC,CHIP
2203-008529	C1046,C1062,C1077	C-CERAMIC,CHIP
2203-008529	C3014,C3019,C4030	C-CERAMIC,CHIP
2203-008529	C7116,C8010	C-CERAMIC,CHIP
2203-008572	C7007,C7009,C7115	C-CERAMIC,CHIP
2203-008572	C8009	C-CERAMIC,CHIP
2203-008795	C8001	C-CERAMIC,CHIP
2203-008844	C9002,C9003,C9004	C-CERAMIC,CHIP
2203-008844	C9006,C9037	C-CERAMIC,CHIP
2203-008860	C1034,C1036,C1037	C-CERAMIC,CHIP
2203-008860	C4029,C4509,C7011	C-CERAMIC,CHIP
2203-008860	C7027,C7028,C7059	C-CERAMIC,CHIP
2203-008860	C8026,C9012,C9017	C-CERAMIC,CHIP
2203-008860	C9019,C9054,C9056	C-CERAMIC,CHIP
2203-008876	C10001,C10003,C10005	C-CERAMIC,CHIP
2203-008876	C10010,C10011,C10013	C-CERAMIC,CHIP
2203-008876	C10022,C10031,C10032	C-CERAMIC,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-008876	C10034,C10050,C3018	C-CERAMIC,CHIP
2203-008876	C3099,C6059,C7000	C-CERAMIC,CHIP
2203-008876	C7001,C7006,C7008	C-CERAMIC,CHIP
2203-008876	C7010,C7013,C7014	C-CERAMIC,CHIP
2203-008876	C7016,C7017,C7018	C-CERAMIC,CHIP
2203-008876	C7019,C7022,C7024	C-CERAMIC,CHIP
2203-008876	C7067,C7083,C7084	C-CERAMIC,CHIP
2203-008876	C7085,C7086,C7110	C-CERAMIC,CHIP
2203-008876	C9000,C9008,C9010	C-CERAMIC,CHIP
2203-008876	C9028,C9029,C9030	C-CERAMIC,CHIP
2203-008876	C9032,C9033,C9063	C-CERAMIC,CHIP
2203-008876	C9064	C-CERAMIC,CHIP
2203-008886	C8057,C8058,C8065	C-CERAMIC,CHIP
2203-008886	C8066,C8067	C-CERAMIC,CHIP
2203-008960	C7072,C7076,C7089	C-CERAMIC,CHIP
2203-009049	C9059,C9061	C-CERAMIC,CHIP
2203-009064	C6017,C6019,C6021	C-CERAMIC,CHIP
2203-009064	C6023,C6032,C6034	C-CERAMIC,CHIP
2203-009064	C6036,C6071	C-CERAMIC,CHIP
2203-009167	C4512,C4514	C-CERAMIC,CHIP
2203-009328	C7064,C7066,C7068	C-CERAMIC,CHIP
2203-009328	C7071,C9027	C-CERAMIC,CHIP
2203-009444	C7012	C-CERAMIC,CHIP
2203-009537	C6015,C6016,C6074	C-CERAMIC,CHIP
2203-009537	C9021,C9039,C9040	C-CERAMIC,CHIP
2203-009537	C9041,C9060,C9068	C-CERAMIC,CHIP
2203-009537	C9069	C-CERAMIC,CHIP
2203-009551	C10015,C8054,C9007	C-CERAMIC,CHIP
2203-009618	C4031,C9051,C9052	C-CERAMIC,CHIP
2203-009732	C7002,C7003,C7004	C-CERAMIC,CHIP
2203-009732	C7035,C7038,C7055	C-CERAMIC,CHIP
2203-009732	C7057,C7058,C7063	C-CERAMIC,CHIP
2203-009732	C7065,C7069,C7070	C-CERAMIC,CHIP
2203-009732	C7080,C7081	C-CERAMIC,CHIP
2203-009733	C10018,C10019,C10020	C-CERAMIC,CHIP
2203-009733	C10035,C10036,C1013	C-CERAMIC,CHIP
2203-009733	C1015,C1020,C1022	C-CERAMIC,CHIP
2203-009733	C4022,C4500,C4501	C-CERAMIC,CHIP
2203-009733	C4520,C6101,C6102	C-CERAMIC,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-009733	C9038	C-CERAMIC,CHIP
2203-009735	C6018,C6038,C6040	C-CERAMIC,CHIP
2203-009735	C6041,C6069,C6070	C-CERAMIC,CHIP
2203-009735	C6073	C-CERAMIC,CHIP
2203-009736	C11000,C11001,C11004	C-CERAMIC,CHIP
2203-009736	C11006,C11009,C11012	C-CERAMIC,CHIP
2203-009736	C6086,C7042,C7044	C-CERAMIC,CHIP
2203-009736	C7045,C7046,C7047	C-CERAMIC,CHIP
2203-009736	C7062,C7106,C7120	C-CERAMIC,CHIP
2203-009736	C7150,C7151,C8038	C-CERAMIC,CHIP
2203-009736	C8045,C9022,C9057	C-CERAMIC,CHIP
2203-009736	C9058,C9079,C9097	C-CERAMIC,CHIP
2203-009742	C6006,C6007	C-CERAMIC,CHIP
2203-009858	C1031,C7015,C7020	C-CERAMIC,CHIP
2203-009858	C7021,C7075,C9065	C-CERAMIC,CHIP
2203-009858	C9070	C-CERAMIC,CHIP
2203-009859	C4015,C7033,C9005	C-CERAMIC,CHIP
2203-009859	C9050,C9053	C-CERAMIC,CHIP
2203-009917	C8011	C-CERAMIC,CHIP
2409-001387	TA7002,TA7003	CAPACITOR
2409-001399	TA7000,TA7001	CAPACITOR
2703-002901	C2525,L2042	INDUCTOR-SMD
2703-002953	L4004	INDUCTOR-SMD
2703-002955	L1009,L1535	INDUCTOR-SMD
2703-002958	L1051,L2023,L3020	INDUCTOR-SMD
2703-002958	L3030,V2010	INDUCTOR-SMD
2703-002959	L10005,R10001	INDUCTOR-SMD
2703-002960	L2506	INDUCTOR-SMD
2703-002999	L4007	INDUCTOR-SMD
2703-003970	L2036	INDUCTOR-SMD
2703-004000	L1018,L1057,L1506	INDUCTOR-SMD
2703-004001	C2080	INDUCTOR-SMD
2703-004012	C1030,C1093,C1516	INDUCTOR-SMD
2703-004012	C1522,L1011,L1501	INDUCTOR-SMD
2703-004012	L1520,L1521,L1525	INDUCTOR-SMD
2703-004012	L1534,L2502	INDUCTOR-SMD
2703-004014	C1047,C2061,C2514	INDUCTOR-SMD
2703-004014	C2524,C3009,C3010	INDUCTOR-SMD
2703-004014	C3012,L2022,L3014	INDUCTOR-SMD

5. MAIN Electrical Parts List

2703-004018	C4558,L1039,L1504	INDUCTOR-SMD
2703-004018	L7001	INDUCTOR-SMD
2703-004030	L1035	INDUCTOR-SMD
2703-004032	C1070,L2031,L2032	INDUCTOR-SMD
2703-004034	C1025,L1502,L1517	INDUCTOR-SMD
2703-004034	L1522,L1530,L2511	INDUCTOR-SMD
2703-004037	C1058,C1088,C2022	INDUCTOR-SMD
2703-004037	L1512,L1529,L1533	INDUCTOR-SMD
2703-004037	L2516,L2518	INDUCTOR-SMD
2703-004038	C1052,C1056,C1083	INDUCTOR-SMD
2703-004038	C2002,C2513,C2515	INDUCTOR-SMD
2703-004286	C1002,C1066,L1500	INDUCTOR-SMD
2703-004286	L1523,L1532,L2505	INDUCTOR-SMD
2703-004299	C1525,C2044,C2047	INDUCTOR-SMD
2703-004299	C2051,C2056,C2506	INDUCTOR-SMD
2703-004299	L1015,L1516,L1524	INDUCTOR-SMD
2703-004328	L3017	INDUCTOR-SMD
2703-004362	L1531	INDUCTOR-SMD
2703-004366	L1519,L3018	INDUCTOR-SMD
2703-004703	L2002	INDUCTOR-SMD
2703-004764	L2033	INDUCTOR-SMD
2703-004853	C2048,L1072,L1073	INDUCTOR-SMD
2703-004862	L1010,L1503,L1528	INDUCTOR-SMD
2703-004901	L9003,L9005	INDUCTOR-SMD
2703-005056	L9008	INDUCTOR-SMD
2703-005067	L4003,L9007	INDUCTOR-SMD
2703-005085	C2055,L3028	INDUCTOR-SMD
2703-005087	L2500	INDUCTOR-SMD
2703-005089	L3015,L4552,L4553	INDUCTOR-SMD
2703-005104	L4500,L4501	INDUCTOR-SMD
2703-005200	L3019,L8003	INDUCTOR-SMD
2703-005201	L7003,L7012,L7020	INDUCTOR-SMD
2703-005201	L7025	INDUCTOR-SMD
2703-005225	L9002,L9013	INDUCTOR-SMD
2703-005233	L8008,L8009	INDUCTOR-SMD
2703-005296	L4554,L4555,L4556	INDUCTOR-SMD
2703-005296	L4557	INDUCTOR-SMD
2703-005340	L1055	INDUCTOR-SMD
2703-005428	L9009	INDUCTOR-SMD

5. MAIN Electrical Parts List

2703-005430	L9010	INDUCTOR-SMD
2703-005445	L1054	INDUCTOR-SMD
2703-005462	L8004,L8016	INDUCTOR-SMD
2703-005505	L7006,L7008,L7018	INDUCTOR-SMD
2703-005505	L8017	INDUCTOR-SMD
2703-005509	L7004,L7005,L7007	INDUCTOR-SMD
2703-005509	L7009,L7010,L7011	INDUCTOR-SMD
2703-005509	L7013,L7014,L7015	INDUCTOR-SMD
2703-005509	L7017,L7021,L7024	INDUCTOR-SMD
2703-005509	L9004	INDUCTOR-SMD
2801-005444	OSC11000	CRYSTAL-UNIT
2801-005481	OSC7000	CRYSTAL-UNIT
2802-001287	OSC4500	RESONATOR-CERAMIC
2901-001690	C6005,C6020,C6022	FILTER-EMI SMD
2901-001690	C6024,C6031,C6050	FILTER-EMI SMD
2904-002224	F2505	FILTER-SAW
2904-002264	F4551	FILTER-SAW
2904-002270	F1506	FILTER-SAW
2904-002286	F3002	FILTER-SAW
2904-002297	F4550	FILTER-SAW
2904-002323	F3003	FILTER-SAW
2904-002347	F2002	FILTER-SAW
2904-002349	F1504,F2500	FILTER-SAW
2904-002356	F2004	FILTER-SAW
2909-001438	F1503,F1505,F2501	FILTER-DUPLEXER
2909-001438	F2502	FILTER-DUPLEXER
2910-000368	F1507	FILTER
2911-000436	U2008	FILTER
2911-000451	U2010	FILTER
2911-000453	U2007	FILTER
3003-001244	MIC8000	MIC-CONDENSOR
3301-001534	L8006,L8007	CORE-FERRITE BEAD
3301-001869	L8010	CORE-FERRITE BEAD
3301-001885	L8013,L8018	CORE-FERRITE BEAD
3301-002085	L11002	CORE-FERRITE BEAD
3301-002223	L10002,L10004,L10006	CORE-FERRITE BEAD
3301-002223	L10007,L10095	CORE-FERRITE BEAD
3301-002235	L2000,L4005,L4006	CORE-FERRITE BEAD
3301-002235	L4013,L4014	CORE-FERRITE BEAD

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

3301-002236	L10001,L10003,L10008	CORE-FERRITE BEAD
3301-002237	L10000,L1001,L1002	CORE-FERRITE BEAD
3301-002237	L1003,L1004,L1005	CORE-FERRITE BEAD
3301-002237	L10096,L10097,L10098	CORE-FERRITE BEAD
3301-002237	L1544,L2003,L2039	CORE-FERRITE BEAD
3301-002237	L2501,L2509,L8001	CORE-FERRITE BEAD
3301-002238	L10099,L4010,L9000	CORE-FERRITE BEAD
3301-002238	L9001	CORE-FERRITE BEAD
3301-002243	L1027	CORE-FERRITE BEAD
3301-002244	L1021	CORE-FERRITE BEAD
3301-002279	L4009	CORE-FERRITE BEAD
3301-002287	L11000,L11001,L4559	CORE-FERRITE BEAD
3301-002287	L4560	CORE-FERRITE BEAD
3301-002309	L2027,L2030	CORE-FERRITE BEAD
3301-002312	L3021,L4011,L4012	CORE-FERRITE BEAD
3301-002312	L9006,L9011,L9012	CORE-FERRITE BEAD
3301-002331	L4000,L7000,L7002	CORE-FERRITE BEAD
3301-002356	L8000,L8002,L8014	CORE-FERRITE BEAD
3705-001937	RFS1000,RFS1003	CONNECTOR-COAXIAL
3705-001937	RFS1500,RFS2003	CONNECTOR-COAXIAL
3709-001892	CN4000	CONNECTOR-CARD EDGE
3711-008741	HDC10002	CONNECTOR-HEADER
3711-008824	HDC10003,HDC7001	CONNECTOR-HEADER
3711-008847	HDC7000	CONNECTOR-HEADER
3711-008983	HDC10001	CONNECTOR-HEADER
3711-008995	HEA11000	CONNECTOR-HEADER
3711-009058	HDC4000	CONNECTOR-HEADER
3711-009065	HDC10000	CONNECTOR-HEADER
3711-009139	HDC8000,HDC9000	CONNECTOR-HEADER
3712-001626	ANT1001,ANT2005	CONNECTOR
3712-001626	ANT2013,ANT2020	CONNECTOR
3712-001626	ANT2021,ANT2022	CONNECTOR
3712-001626	ANT2023,ANT2024	CONNECTOR
3712-001626	ANT2025,ANT3000	CONNECTOR
3712-001626	ANT3003,ANT4010	CONNECTOR
3712-001626	ANT7006,ANT7007	CONNECTOR
3712-001626	ANT7008,ANT7009	CONNECTOR
3712-001626	ANT7010,ANT7011	CONNECTOR
3712-001626	ANT7012	CONNECTOR

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

3712-001634	ANT7013,ANT7014	CONNECTOR
3712-001634	ANT7015,ANT7016	CONNECTOR
3712-001666	ANT2001,ANT2002	CONNECTOR
3712-001666	ANT2007,ANT2011	CONNECTOR
3712-001666	ANT3001,ANT3002	CONNECTOR
3712-001694	ANT8002,ANT8003	CONNECTOR
4709-002193	CPL1501	RF-MODULE
4709-002196	U2501	RF-MODULE
4709-002360	F1500,F2504	RF-MODULE
4709-002464	F2503	RF-MODULE
4709-002496	F1501	RF-MODULE
4709-002539	U3004	RF-MODULE
4709-002560	CPL1500	RF-MODULE
GH60-00010A	CLIP1001	CLIP
GH70-05616A	CLIP1000	CLIP
GH62-00048A	CN10000,CN10001	GASKET
GH63-14237A	SC1001	SHIELD CAN
GH63-14683A	SC1002	SHIELD CAN
GH63-14699A	SC1004	SHIELD CAN
GH63-14700A	SC1003	SHIELD CAN
GH63-14768A	SC1000	SHIELD CAN
GH98-41964A	SC1006	SHIELD CAN
GH98-41965A	SC1005	SHIELD CAN
GH02-15323A	SC1003SP	TAPE CONDUCTIVE-NANOFOAM
GH63-14801A	SUS1000	SUS-PLATE

Please consult the GSPN website (Samsung Portal) for the most recent version of the product's part list.