


INSTRUCCIONES RESET R1900


Presione el botón “Reseteador”:



Aparecerá la siguiente pantalla. Presione el botón “Accept”

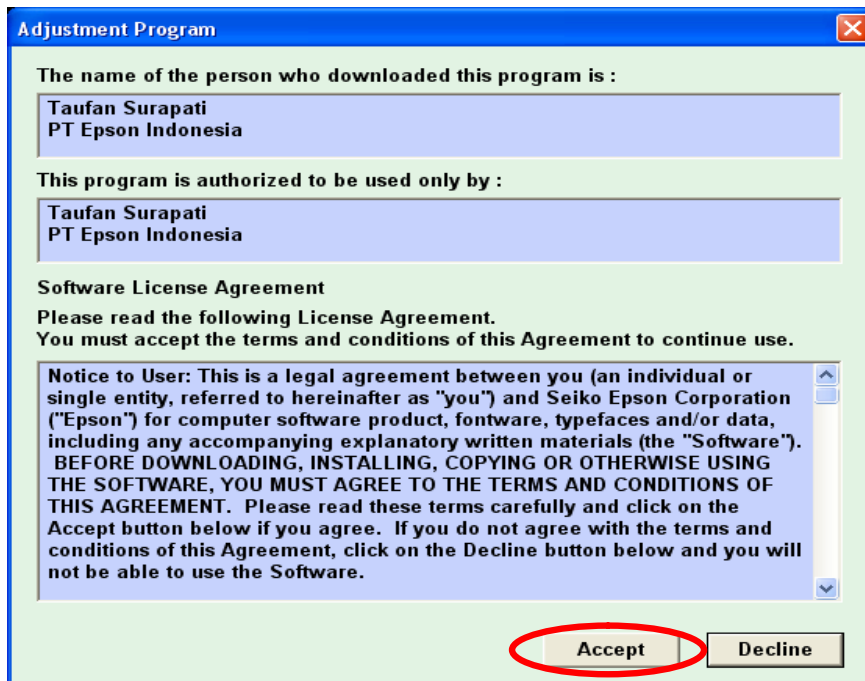


Presione el botón “**Particular adjustment mode**”:

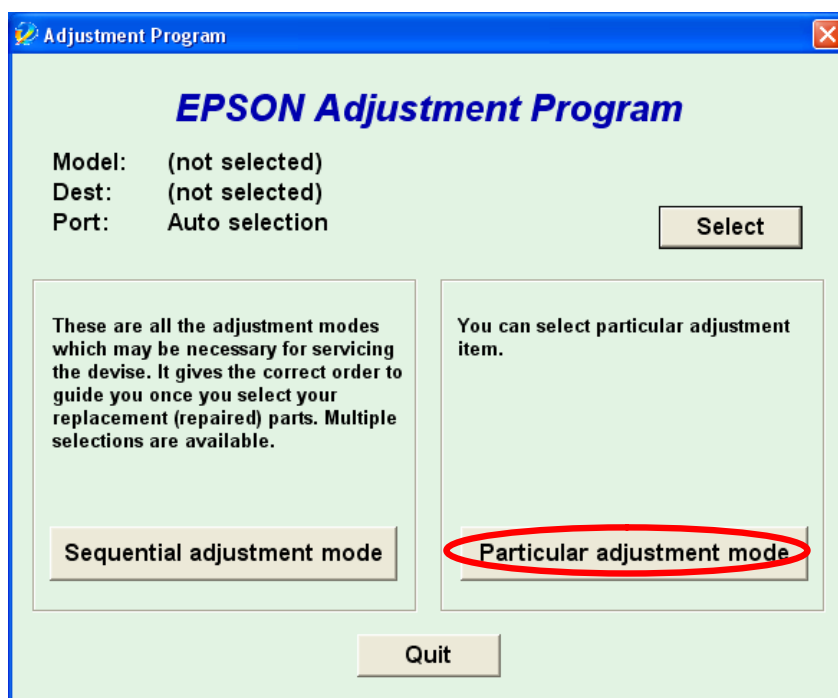

En la siguiente pantalla seleccionar en destination “EURO (CISMEA)” como muestra la siguiente pantalla y luego el botón OK.



Seleccione la opción **“Waste ink pad counter”** y luego presione el botón **“OK”**:

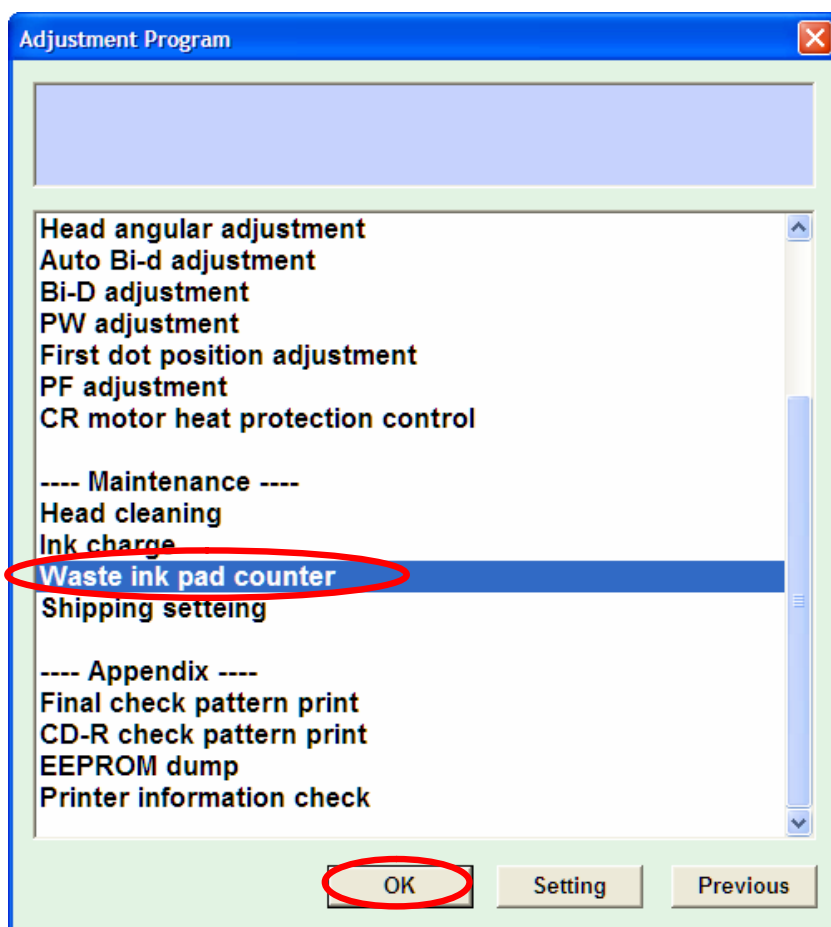

Seleccionar el botón “check” para recuperar el valor actual del contador. Tildar las casillas “pad Counter of 0” y “pad Counter of 80”. Luego presionar en el botón “Initialization” para resetear el contador a cero.


The screenshot shows a software window titled "Adjustment Program" with a sub-header "Waste ink pad counter". Below this is a large blue rectangular area. Underneath is a section titled "Check & Initialization". This section contains two rows of controls. The first row has a checked checkbox, the text "Pad counter of 0 culmu", two empty input fields, and the labels "point" and "%". The second row has a checked checkbox, the text "Pad counter of 80 culmu", two empty input fields, and the labels "point" and "%". At the bottom of the window, there are several buttons: "Get Status", "Cleaning", "< Back", "Finish", and "Cancel". Above the "Finish" button, there is text: "The current counter value is confirmed. -->" followed by a circled "Check" button, and "Initialization will clear the selected above counters. -->" followed by a circled "Initialization" button.

Presionar el botón “Aceptar” y el contador será reseteado.

The screenshot shows an "Information" dialog box. It has a blue header bar with the word "Information" and a close button. Below the header is an information icon (a lowercase 'i' in a circle) followed by the text "When the OK button is clicked, initialization is done.". At the bottom of the dialog box are two buttons: "Aceptar" and "Cancelar". The "Aceptar" button is circled in red.

Apagar la impresora. El contador se ha reseteado.
Presione el botón “Finish” para cerrar la pantalla.

Cerrar el soft. Presionando el botón “Previous”

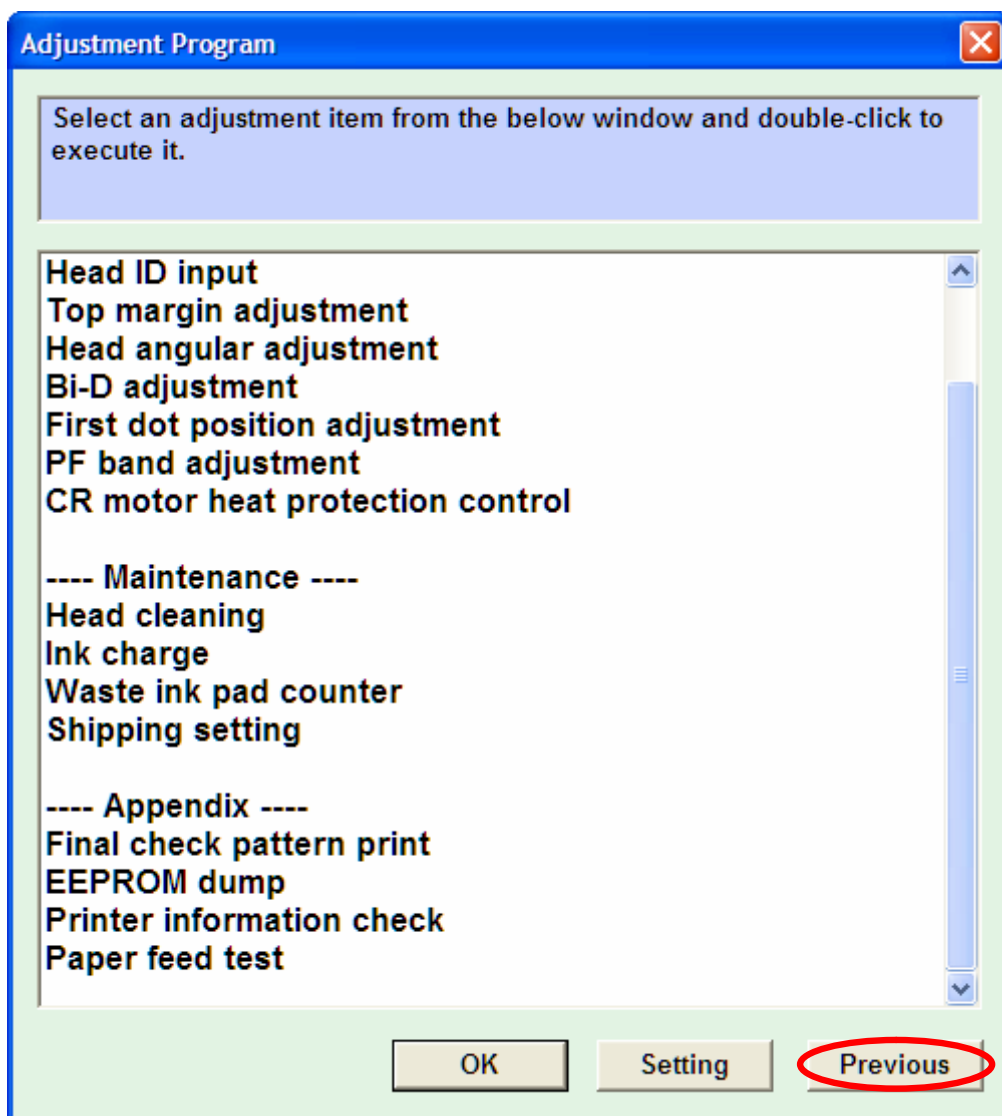

Y en la siguiente pantalla, presione el botón “Quit”

